


Black-Stone Standalone Air Cabinet

800mm OWNER'S MANUAL

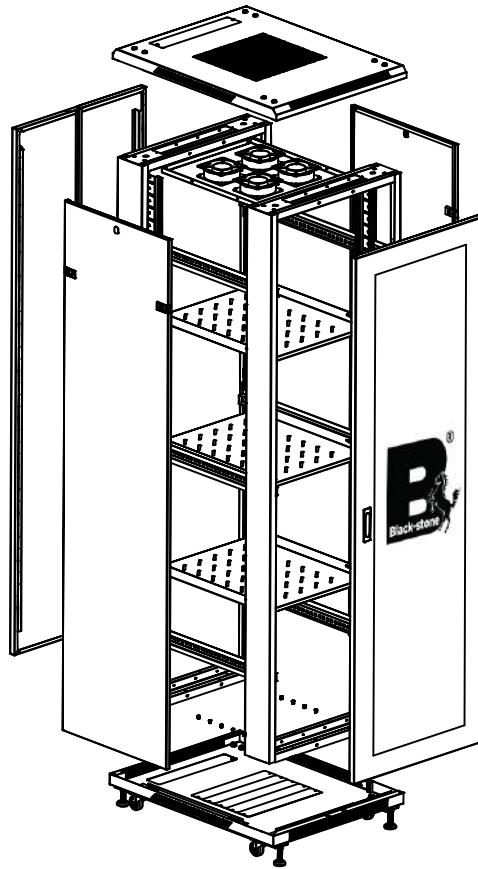

Packing List

- | | |
|-----------------------------|----------------------------------|
| 1-Bottom Tray - 1 pcs | 9-Shelves- |
| 2-Top Tray - 1 pcs | 3pcs(for over 42U-high) |
| 3-Frame - 2pcs | 2pcs(from 32U-high to 42U -high) |
| 4-Horizontal Support - 6pcs | 10-Fan Tray - 1 pcs |
| 5-Vertical Support - 4pcs | 11-Cover Panel - 3pcs |
| 6-Side Door - 2pcs | 12-Vertical Cable Manager- 2pcs |
| 7-Front Door - 1 pcs | 13-Connect Block - 12pcs |
| 8-Rear Door - 1 pcs | |

Accessories Package list

1-M12*L90 Supporting Feet- 4pcs
 2-Casters- 4pcs
 3-Anti-skid Stop - 4pcs
 4-M8*12 Hexagon Socket Screw - 16pcs
 5-M8 Flange Nut - 16PCS
 6-M6*12 Screw -
 108pcs(for over 42U-high)
 104pcs(from 37U-high to 42U -high)
 7-4mm Plastic Washer - 2pcs



8-M4*12 Self-tapping Screw - 18pcs
 9-M6*12 Self-tapping Screw - 16pcs
 10-M6 Cage Nut -
 60pcs(for over 42U-high)
 56pcs(from 37U-high to 42U -high)
 11-M6 Plastic Washer -
 84pcs(for over 42U-high)
 80pcs(from 32U-high to 42U -high)
 12-M6 flange nuts - 48pcs

Assembly Instructions

1. Assembling the Top Tray, Bottom Tray, and Frame


To begin, use 16 M8*12 hexagon socket screws and 16 M8 flange nuts to assemble the top tray, bottom tray, and frame. This forms the main structure.

Refer to the image for guidance.

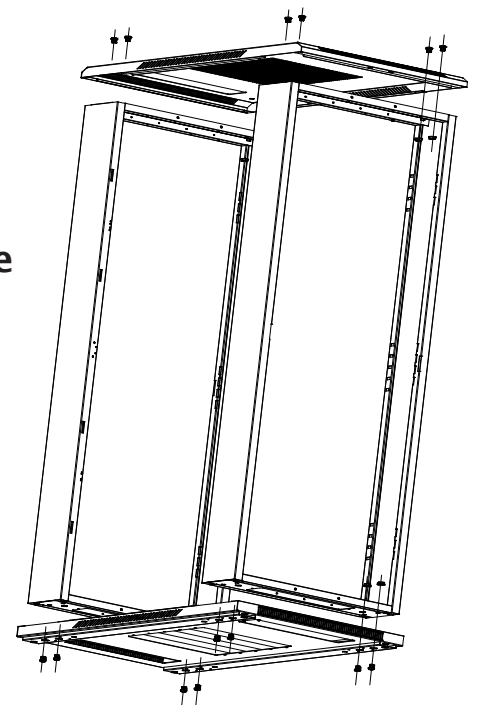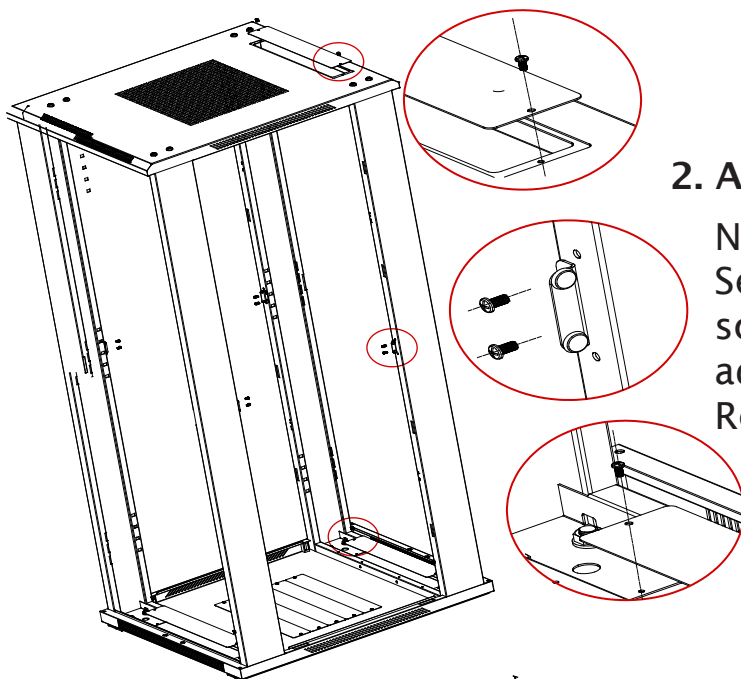

2. Attaching the Top Cover and Anti-Skid

Next, attach the top cover and anti-skid stop. Secure the top cover using 6 M48 self-tapping screws, then fasten the anti-skid stop with 8 additional M48 self-tapping screws. Refer to the image for guidance.


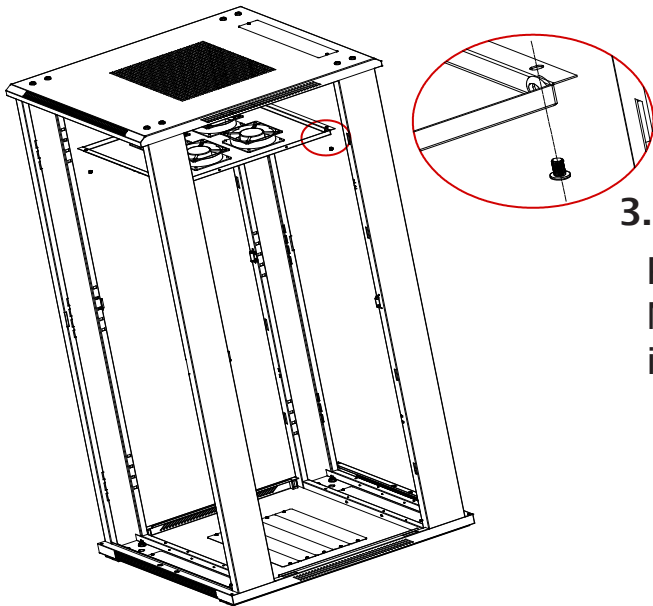


3. Installing the Fan Tray

Proceed by installing the fan tray. Use 4 M4*8 self-tapping screws to fix the fan tray in place. Refer to the image for guidance.


4. Attach Horizontal Supports

Following this, attach the horizontal supports. Use 24 M6*12 screws, M6 cage nuts, and plastic washers to secure these supports firmly in the frame. For correct alignment, Refer to the image for guidance.

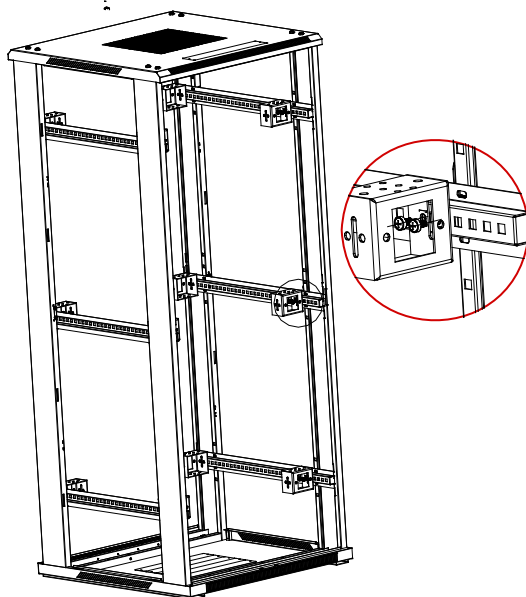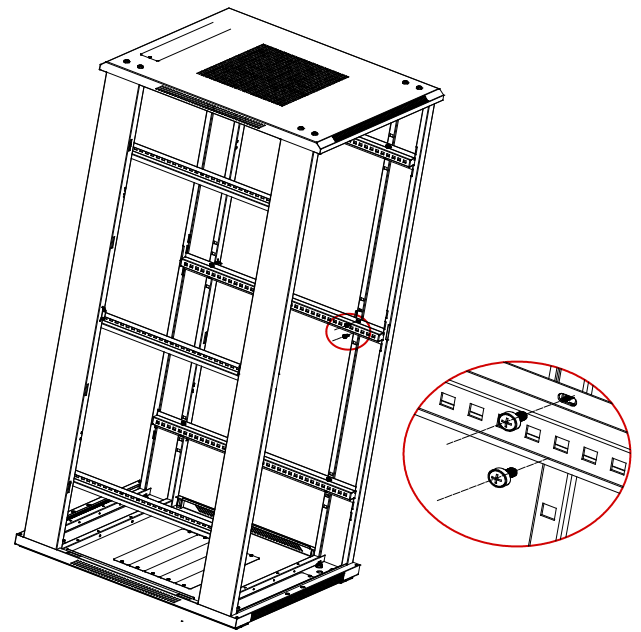


5. Securing the Connect Blocks

Once the horizontal supports are in place, it's time to secure the connect blocks. Use another set of 24 M6*12 screws, M6 cage nuts, and M6 plastic washers for this step.

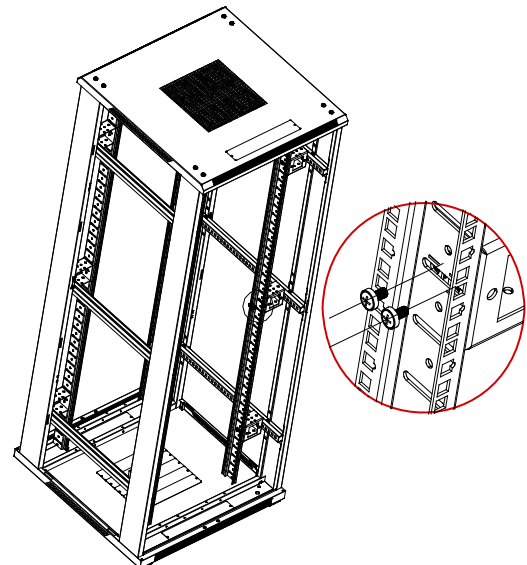


6. Mounting the Vertical Supports

Now, mount the vertical supports to the frame using 24 M6*12 screws, M6 flange nuts, and M6 plastic washers.

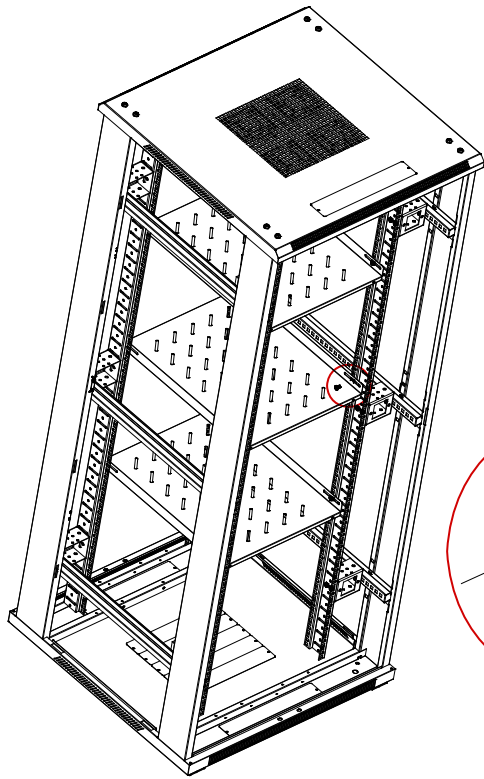




7. Installing the Shelves

To install the shelves, use 12 M6*12 screws, M6 cage nuts, and M6 plastic washers.

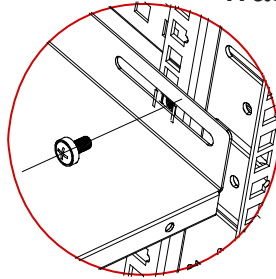

8. Attaching the Vertical Cable Manager

Next, attach the vertical cable manager. Secure it with 24 M6*12 screws, M6 flange nuts, and M6 plastic washers

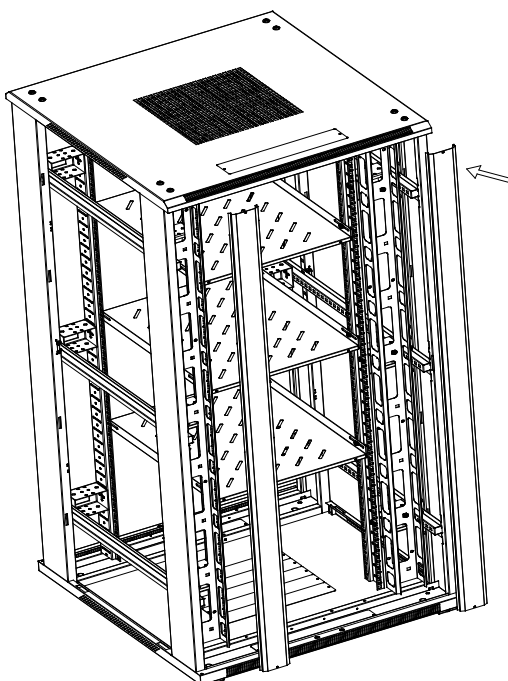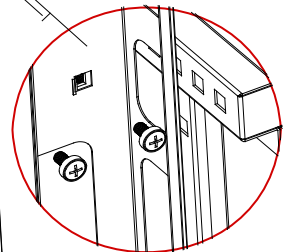
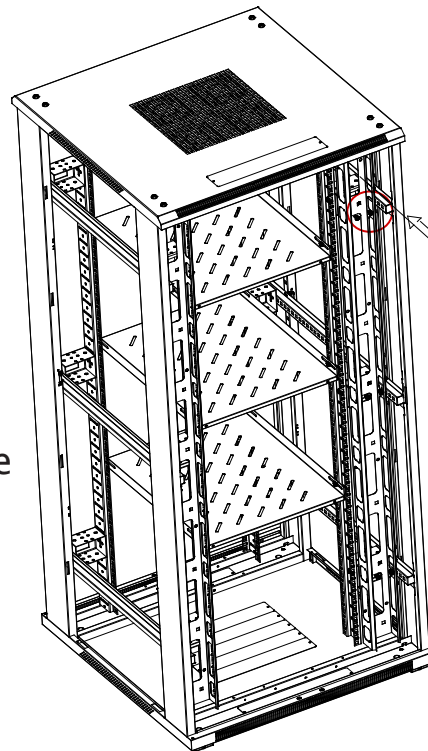


9. Securing the Cable Manager Cover

After securing the vertical cable manager, snap on its cover without using any tools. This cover is designed to attach easily by hand.


10. Installing the Casters and Supporting

For the next step, install the casters and supporting legs. Use 16 M612 self-tapping screws to fasten the casters, and attach the M12L90 supporting legs.

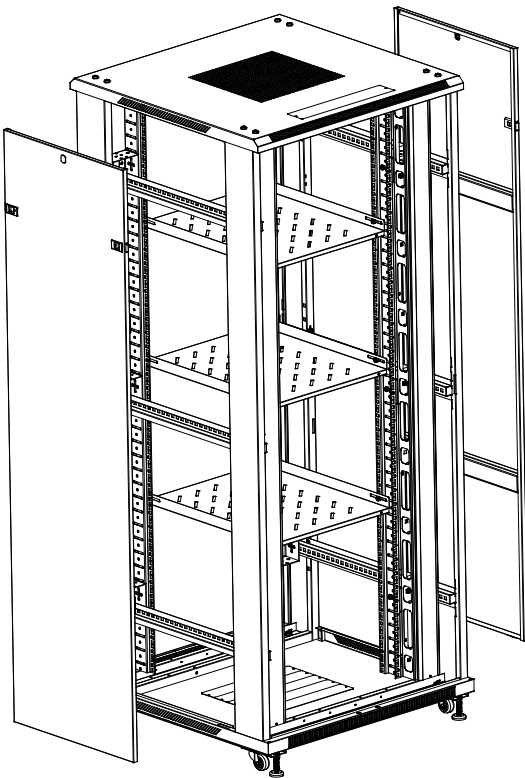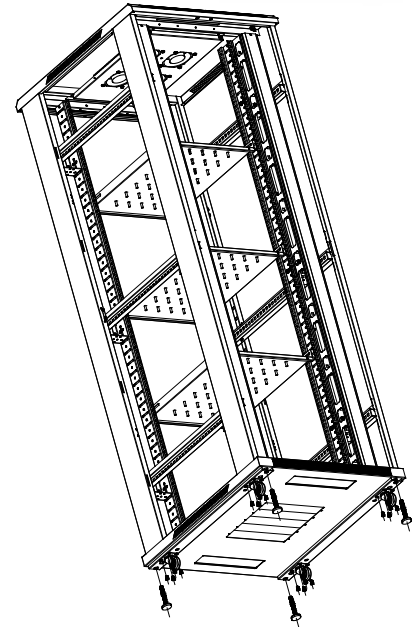

11. Attaching the Side Doors

Then, attach the side doors using a tool-free assembly method.

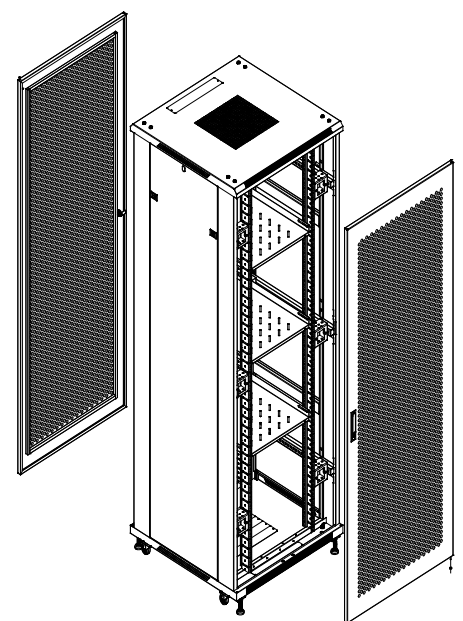

12. Mounting the Front and Rear Doors

Finally, mount the front and rear doors. Secure these doors with 4 mm plastic washers as shown in the left picture to complete the assembly.